



### DRAGON WINGS FOR GOLD WING

8939

#### Thank You For Choosing Kuryakyn!

Protect yourself and others from potential injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

#### **WARNING**

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

#### **NOTICE**

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

#### ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Hand Dragon Wing Assembly
- 1 Left Hand Dragon Assembly
- 1 Hardware Kit containing:
  - 6 M5 X 0.8 X 40MM Socket Button Head Cap Screws
  - 6 M5 Flat Washers

#### YOU WILL ALSO NEED:


Plastic trim tool, masking tape and a marker, center punch, drill bit and drill, set of hex wrenches

#### **NOTICE**


These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future use.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**.

**STEP 2** Refer to PIC 1. Use a plastic trim tool to release the bottom of the trim piece from the fairing; start at the bottom and work upwards.

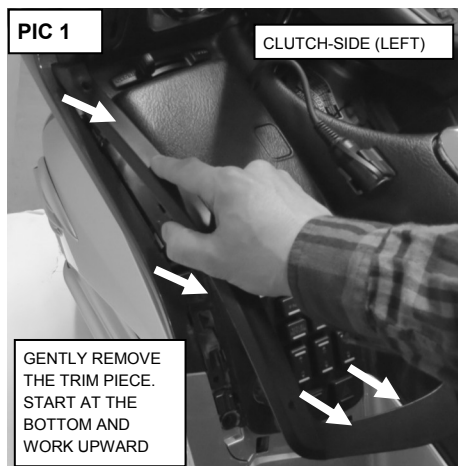

**STEP 3** Refer to PIC 2. Locate the three screws underneath the trim piece; use masking tape and a marker to mark their horizontal locations; remove and discard the screws.

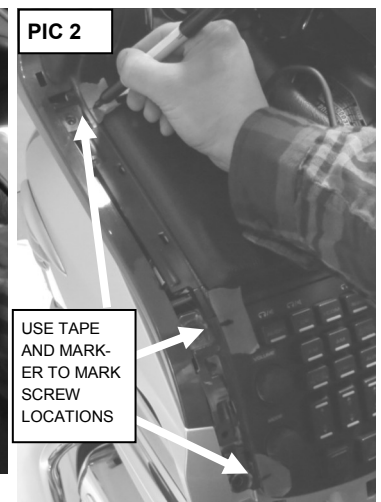



STEP 4 Refer to PIC 3. Reinstall the trim; use tape and a marker to carry the three screw locations across to the trim; **CAREFULLY REMOVE THE TRIM.**

STEP 5 Refer to PIC 4. Make vertical marks in the center between the ridge and edge of the trim.

STEP 6 Refer to PIC 5. Make a center punch mark on the trim at the intersection of the vertical and horizontal lines. Repeat for all three locations.

STEP 7 Remove and discard the tape; drill small pilot holes in the trim at the center punch marks.  
**Ensure that the trim has been removed from the bike before drilling or damage will occur!**




STEP 8 Enlarge the pilot holes to ?.

STEP 9 Reinstall the trim; ensure that the drilled holes align over the screw holes; the holes may need to be enlarged to align, if so, remove the trim before drilling.

STEP 10 Locate the included Screws and Washers; assemble the three Washers and Screws; set them within arm's reach of the work area.

STEP 11 Refer to PIC 6. Locate the included Left Hand Dragon Wing; align it over the three holes; secure the Dragon Wing with the three Screws and Washers; start all three Screws in the threads before fully tightening.

STEP 12 Repeat STEPS 2 THROUGH 11 for the other side.

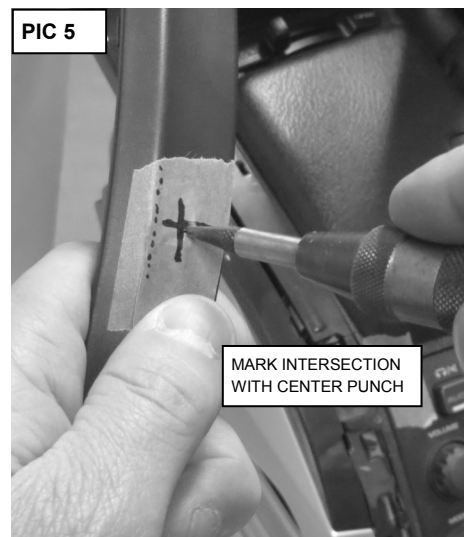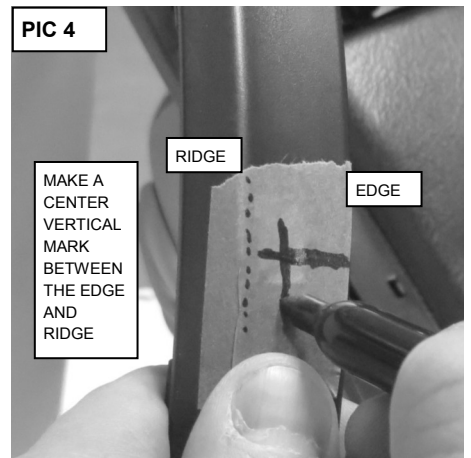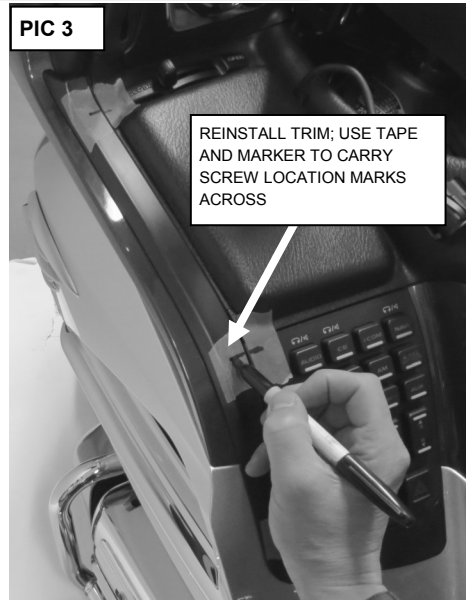



### NOTICE

It is the end user's responsibility to ensure that all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

#### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Küryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn & a customer.
4. Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
5. Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Küryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase whereas all other components shall be warranted for one (1) year.
6. Merchandise purchased directly from Internet auction sites or any other third party seller is considered sold as is & shall not carry a Küryakyn warranty. All warranty claims must be directed to the original seller. If unsure please contact the seller to verify they are an authorized Küryakyn retailer.

#### RETURN POLICY

Merchandise determined to be defective may be returned up to one year from the date of purchase. Returns must be processed through original seller. Returned merchandise for any other reason other than warranty claims must be in like new condition & subject to a 20% restocking fee. All returns are subject to inspection for determination of full or partial credit. Any returned part that shows evidence of being used or installed contrary to manufacturer's instructions, &/or subjected to improper handling, packaging or return shipping by the customer, will not be eligible for exchange, refund or warranty consideration. All returned electrical items will be inspected & tested. If electrical item is deemed functional, no credit will be issued & item will be returned. All sales are final on discontinued or closeout merchandise.