



INSTALLATION

FRONT FENDER EXTENSION

7352

PARTS INCLUDED

- 1 Front Main Splash Guard — Chrome
- 1 Lower Rubber
- 1 Lower Rubber Support
- 2 End Caps - Chrome
- 2 Fender Aluminum Step Spacers
- 1 Mounting Tape
- 2 .50 O.D. x .22 I.D. Flat Washers
- 2 #10-24 Nylock Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

TOOLS SUGGESTED

Set of Drill Bits, Drill, Set of Combination Wrenches, Fine Tip Non-permanent Marker, Ammonia Based Glass Cleaner, Clean rag

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Thoroughly clean the bottom portion of the front fender where the extension will be installed, with glass cleaner or other mild solvent. All wax, oily residue etc. must be removed or the adhesive may not hold to its full potential.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.

-cont.-


7352-23GL-0711

kuryakyn.com



STEP 3 Trial fit and make installation reference marks. See PIC.1.

NOTE: There are two vertical tabs that are cast into the back-side of the fender extension. These are fender stops. Both tabs should contact the bottom lip of the fender to insure a straight, level orientation. We suggest leaving the adhesive backing on the fender extension and holding the extension into place; this will allow slight movement from side to side so the extension can be positioned to line up with the contour of the fender on both sides. When you are satisfied with the positioning of the extension, hold it firmly in place and mark the (larger) hole locations as well as along the top of the fender extension with a non permanent fine tip marker.

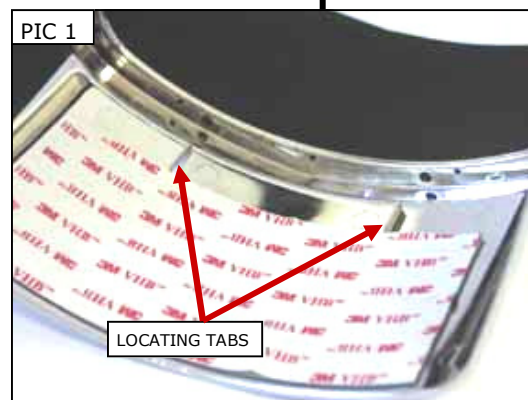

ATTENTION! If your bike was previously equipped with a Honda fender extension the holes are already drilled, but they will be too large. Two stepped reducing spacers are included. These spacers may be inserted into these holes from the inside of the fender to reduce the hole size.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Rub the adhesive backing with your finger nail to activate the adhesive. Remove all adhesive backing from the inside of the fender extension.

NOTE: You must be very careful during the installation of the extension. The adhesive is very strong and is intended for a one-time, permanent, installation. Work slowly and precisely. Using the marks you made on the fender, as well as the fender stops inside the extension, set the extension in place and apply firm pressure for one full minute to insure a good, complete adhesive bond.

STEP 5 While holding the sides of the fender extension tightly against the fender, use the larger holes in each side of the extension as a template to drill the 7/32" mounting holes. The smaller holes on each side are for indexing pins only - do not drill any holes in these locations.

CAUTION! To prevent the tire from being punctured, place something (small piece of wood) between the tire and the fender.

STEP 6 Insert the studs on the two end caps into the holes you just drilled. The small indexing pins will insert into the smaller of the two holes on each side of the extension. Secure the end caps into place with the included flat washers, and 10-24 Nylock nuts. Do not over torque these nuts.