



INSTALLATION

ACCENTS for H-D TRIKE REAR BUMPER 7223

PARTS INCLUDED

- 1 Right Bracket Cover
- 1 Left Bracket Cover
- 1 Hardware Kit Containing:
 - 2 Clamps
 - 4 #8-32 Nylock Nuts
 - 4 #8 Flat Washers
 - 4 #8-32 X 1" Socket Head Cap Screws
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING	THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
NOTICE	This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE	IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.
---------------	---

TOOLS SUGGESTED

Set of Hex Wrenches, Cleaning Supplies

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING	YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.
----------------	---

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.


-cont.-

7223-22HD-1212

kuryakyn.com




STEP 2 Determine the left from the right (sitting on Trike) Bumper Accents. PIC 1 They are marked on the end of each Accent.

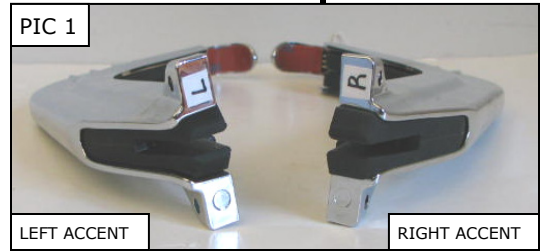

STEP 3 Thoroughly clean the round portion of the bumper above the location of each mount (PIC 2) with soapy water and a clean rag. Rinse and dry completely. Wipe the installation area with the included alcohol pad to remove any residue. Dry completely.

NOTICE Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.


NOTICE The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

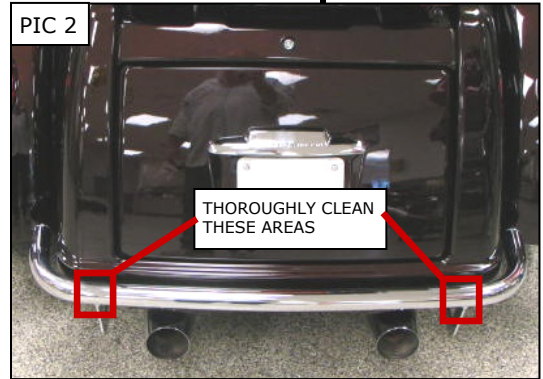

STEP 4 Test fit the left Accent to the left bumper mount. Make any reference marks with masking tape or a non-permanent marker.

NOTE: For the following Step, spraying a little window cleaner or soapy water in the bottom of the rubber channel of the Accent will help it slide on easier.

STEP 5 Rub the backing paper of the adhesive in the hook of the left Accent with your fingernail. Remove the backing. Insert the rib of the bumper mount into the channel in the left Accent and slide it forward, making sure the rib is firmly in the channel and using any reference marks made in Step 4, until the adhesive on the hook contacts the round portion of the bumper. Press in place for one minute. Full bonding will occur in 24 hours.

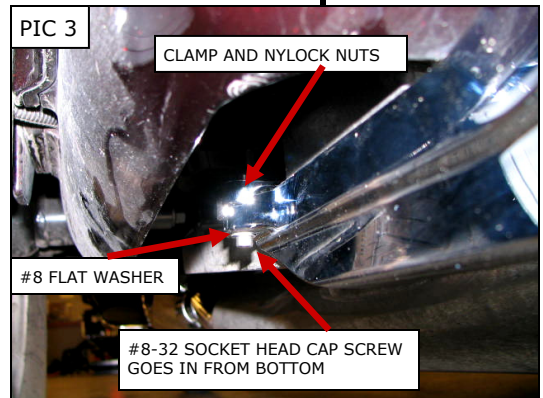

STEP 6 Press one of the included #8-32 nylock nuts into each hex recess in one of the clamps. If the nylock nuts fit loosely in the hex recess, place a piece of tape over them.

STEP 7 Place the clamp over the top of the bumper mount and using two of the included #8-32 X 1" socket head cap screws and #8 flat washers, loosely attach the clamp to the Accent. PIC 3 Place a finger over the nylock nut in the clamp and tighten the socket head cap screw until you can feel the threads starting to protrude through the nut. Check the Accent, if it is tight and doesn't move, do not tighten further. If the Accent still has movement, tighten the socket head cap screw a little at a time until there is no movement in the Accent. **DO NOT OVER-TIGHTEN!**

STEP 8 Repeat Steps 3 through 7 for the right side.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.