



# Tiger 900 Mobil Bracket

code 309021


Flathead  
M6x30



309021 A

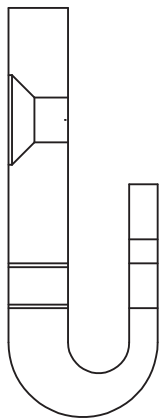


309021 B

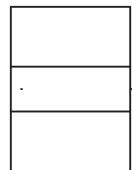


309026 B




309026 BC

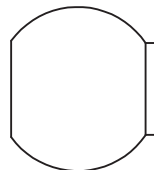


309026 BB

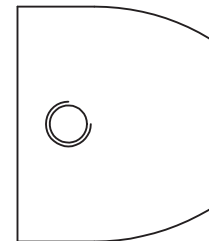

309023 C

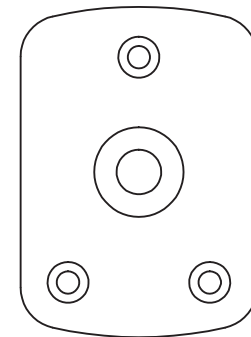

Flathead  
M6x20



Buttonhead  
M6x20

