



## TRUNK ACCENT SWOOPS w/L.E.D. RUN-TURN LIGHTS 3233

### PARTS INCLUDED

- 1 Right Trunk Accent Swoop
- 1 Left Trunk Accent Swoop
- 1 "Y" Run-Brake Harness
- 1 Double "Y" Adapter
- 6 4" Black Nylon Cable Ties
- 2 Alcohol Pads
- 1 Dielectric Grease Pack
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

<b>WARNING</b>	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
<b>NOTICE</b>	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.</b>

<b>NOTICE</b>	<b>IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.</b>
---------------	---

### TOOLS SUGGESTED

Set of Metric Hex Wrenches, Rattail File, Masking Tape, Non-Permanent Marker

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**NOTE:** On '06-'10 GL 1800's, this product requires the separate purchase and installation, or the motorcycle to be equipped with, Kuryakyn Rear Accessory Light Adapter, P/N 3241.

On '12-UP GL 1800's, this product requires the motorcycle to be equipped with Kuryakyn Rear Accessory Plug and Play Harness, P/N 3230.

<b>NOTICE</b>	<b>A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.</b>
---------------	---

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.




**STEP 2** Remove the rear fender panel and the seat. PIC 1

**NOTE:** Older models may have one fastener behind the license plate.


**STEP 3** Determine the left from the right (sitting on the motorcycle) Trunk Accent Swoop. PIC 2

**STEP 4** Thoroughly clean the sides of the trunk with soapy water and a clean rag. Rinse and dry completely. Wipe the installation area with one of the included alcohol pads to remove any residue. PIC 3

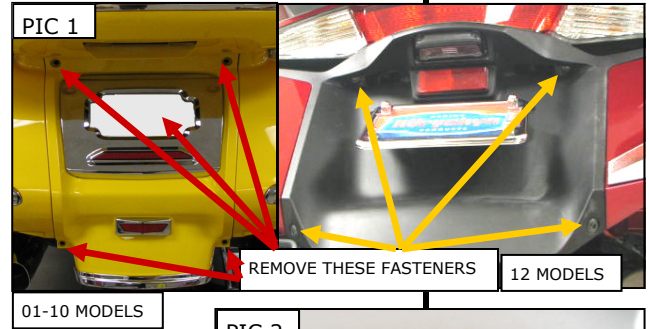


**NOTICE** Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 5** Starting with the right side, test fit the Trunk Accent Swoop. Make any reference marks with a non-permanent marker or masking tape. The rear edge of the Swoop will line up with the front edge of the right trunk light. PIC 4

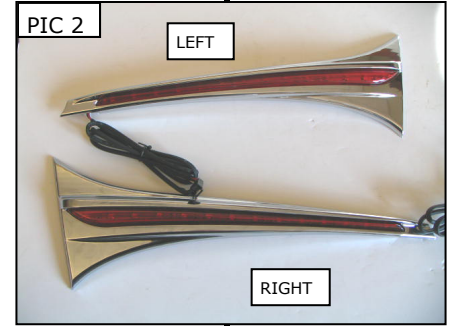


**NOTICE** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 6** Rub the backing of the adhesive tape with your fingernail. Peel the backing off the Swoop and attach it to right side of the trunk using any reference marks made in Step 5. Press the Swoop firmly in place for one minute. Full bonding will occur in 24 hours.

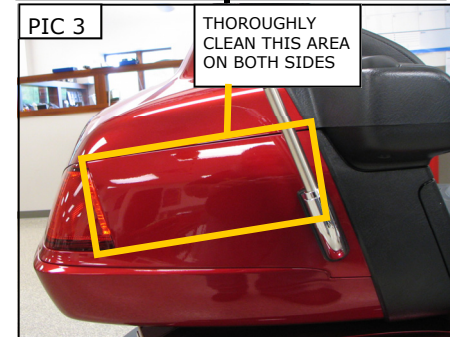

**NOTE:** If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Swoop to assist in holding it in place until the cure time is over.


**STEP 7** Repeat Steps 5 and 6 for the left side.

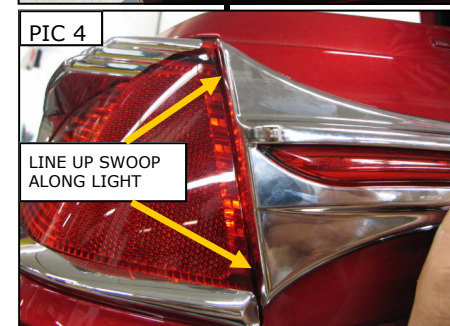

**STEP 8** Open the trunk. Route the wire harness from each Swoop over the black lip (shown in PIC 5) on each side.

**NOTE:** Küryakyn recommends using a rattail file to notch the black lip (PIC 5) to ensure the wire harness does not get pinched when the trunk lid is closed.

**STEP 9** Route the wire harnesses from each Swoop along the OEM harness on each side of the trunk to the center of the motorcycle under the seat. PIC 6 Use the included nylon cable ties to secure them out of harms way.

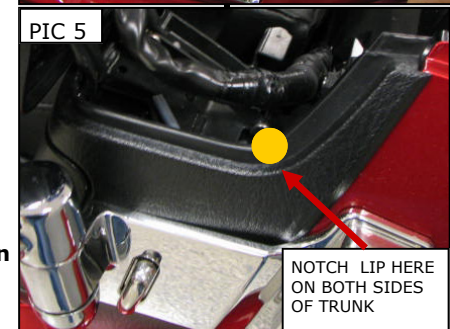

**NOTE:** Make sure that the wire harnesses from the Swoops DO NOT get pinched in the hinges.

**NOTICE** Küryakyn recommends the use of dielectric grease on electrical connections.

-cont.-

**STEP 10** Locate the Run-Turn "Y" harness. Connect the three pin connector marked **LEFT** (with the ORANGE, RED and BLACK wires) to the Swoop attached to the left (sitting on bike) side of the trunk. Connect the three pin connector marked **RIGHT** (with the BLUE, RED and BLACK wires) to the Swoop on the right side of the trunk.

**STEP 11** **On '12-UP models: Requires the separate purchase and installation of Küryakyn P/N 3230 to complete installation.** Route the six pin connector on the end of the Run-Turn harness under the seat, and along the main harness (along the frame on the **RIGHT** side of the motorcycle, PIC 7), to the rear of the motorcycle. It may be helpful to use a guide wire. Use the included cable ties to secure the harness out of harms way.

**On '06-'10 models: Requires the separate purchase and installation of Küryakyn P/N 3241 to complete installation.** Take a piece of wire or a straight coat hanger (to pull the wire through) and run it along the inside of the left frame rail (PIC 8), until you can reach it from the back of the bike. The wire should come out to the top left of the inside back panel. Tape the six pin connector end of the Run-Turn harness to the wire. Secure the wire tight enough that it will not come undone in the routing process. Pull the wire or coat hanger back toward the rear with the wires still secured to it. Once the wires are pulled far enough to reach, they can be removed from the wire/coat hanger. Use the included cable ties to secure the harness out of harms way.

**STEP 12** **Please refer to the instructions for P/N 3241 for '06-'10 models or P/N 3230 for '12-UP models:** If you have an open six pin connector on the Plug and Play Harness or Rear Adapter harness, connect the six pin connector from the "Y" harness to it. If you do not have an open connector, disconnect one of the six pin sets and connect the included Double "Y" connector in line. Connect the existing accessory and the Accent Lights to the new Double "Y" connector. Use the included cable ties to secure the harness out of harms way.

**NOTICE** **Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.**

**STEP 13** Turn the motorcycle on and verify that all lights work correctly.

**WARNING** **ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MAL-FUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.**

**STEP 14** Replace the seat and rear fender panel.

**WARNING** **AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.**

**NOTICE** **It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.**

*Ride On!*

