



INSTALLATION



REFLECTIVE SMOKE SADDLE SHIELDS 1316

U.S. PAT# 6,854,542

FITS: '09-Up Electra Glides, Road Glides, Street Glides and Road Kings

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



PARTS INCLUDED

- 1 Left Saddle Shield
- 1 Right Saddle Shield
- 1 Hardware Kit, including:
 - 2 5/16 Flat Washers
 - 2 Die Cut Saddle Shield VHB
 - 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Torx Wrenches, Set of Socket Wrenches, Soapy Water and a Clean Rag


STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.
- STEP 2** Remove the seat, both of the saddlebags and the side covers; set them aside on a soft, sturdy surface to prevent damage.
- STEP 3** Locate the two holes in the frame forward of the battery compartment. See PIC 1
- STEP 4** Remove the two bolts shown in PIC 1. These will be re-used.

-cont.-

PIC. 1

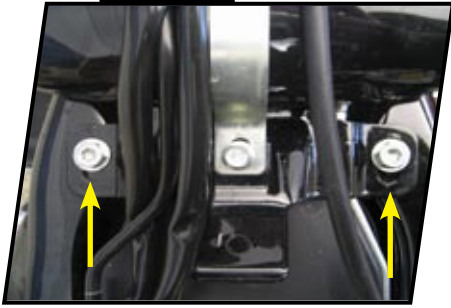

STEP 5 Remove any grease or debris from the installation area (See PIC 2) with soapy water and a clean rag; allow the area to dry completely.

PIC. 2



ATTENTION! Thoroughly clean the area (See PIC 2) of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 6 Clean the area (See PIC 2) with the included alcohol cleaning pad; allow the area to dry completely.

STEP 7 Rub the backing on the adhesive strips on the underside of the Saddle Shields to activate the adhesive before installing.

STEP 8 Remove the adhesive backing from the adhesive strips on one of the Saddle Shields.

STEP 9 Insert the bolt removed in STEP 4, with the 5/16" flat washer included, through the saddle shield and thread it in to place.

STEP 10 Adjust the Saddle Shield to desired position and press the Saddle Shield into place, holding for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. Tighten the bolt.

STEP 11 Repeat Steps 5 - 9 for the other side.

PIC. 3



ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

STEP 12 Reinstall the side covers, saddlebags and seat.

STEP 13 Ensure proper clearance and operation before riding the motorcycle.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! Clean the Reflective Smoke Saddle Shields with a mild soap and water only.

Ride On!

Küryakyn[®]